

Pizza CRUST

Release Notes

crust 1.1 (CLIP light ON at startup)

Improved handling of envelopes for more responsive and predictable sequencing of the LAYER fader.

crust 1.0 (SHAPE light ON at startup)

release version

HOW TO UPDATE:

1. Connect a micro USB cable to the Pizza Crust module.
(Make sure it's a data cable and not just a power cable.)
2. Hold the PITCH button and plug the USB into your computer
3. The SWEEP LED will start flashing
4. Crust shows up as an external disk on your computer
5. Copy the `pizza_crust_*version*.uf2` file to this drive and wait for the Pizza Crust module to update and boot to normal operation
6. Successful update is indicated by the DETUNE LED lighting up briefly, unsuccessful update is indicated by SWEEP & SHAPE LED lighting up
7. After a successful update, disconnect the USB and install the Pizza Crust module in your rack

Crust shows the firmware version by a static light of the LEDs at startup:

The first release firmware has the SHAPE light on.