

Kastle 2 FX Wizard

Release Notes

Kastle2-fx-wizard-1.3

Changes:

- Fixed unwanted triggering when Time potentiometer close to maximum

kastle2-fx-wizard-1.2

Changes:

- Added USB MIDI (see manual)
- Better patch inputs responsivity and overall device performance
- Bug fixes (Replayer noise issue and small other issues)
- Tap tempo is multiplied by 4 (Unified with Wave Bard)
- Advanced settings takes shorter time to open (Unified with Wave Bard)

kastle2-fx-wizard-1.1

Fixed:

- delay now works in full 1.15s range

kastle2-fx-wizard-1.0

release version

To check the firmware version, listen to the audio output and boot Kastle 2 into the Test Mode: Hold FX MODE button and turn power ON.

A voice will announce the firmware version.

HOW TO UPDATE:

- 1) Connect Kastle 2 with a USB-C cable to your computer
- 2) Turn OFF the power switch (left)
- 3) Hold SHIFT and turn ON the power switch (right)
- 4) Kastle 2 will boot to the update mode (no sound)
- 5) Copy the firmware **.uf2** file to the RPI-RP2 disk showing on your computer.