

Kastle 2 / Citadel FX Wizard

Release Notes

kastle2-fx-wizard-1.6

Changes:

- Fix USB descriptors (properly shows "Kastle 2 FX Wizard" on Windows, better overall Linux support)
- Add support for web app (FX Wizard Chamber)
- Small internal tweaks and cleanup

kastle2-fx-wizard-1.5

Changes:

- Added Citadel compatibility

kastle2-fx-wizard-1.3

Changes:

- Fixed unwanted triggering when Time potentiometer close to maximum

kastle2-fx-wizard-1.2

Changes:

- Added USB MIDI (see manual)
- Better patch inputs responsivity and overall device performance
- Bug fixes (Replayer noise issue and small other issues)
- Tap tempo is multiplied by 4 (Unified with Wave Bard)
- Advanced settings takes shorter time to open (Unified with Wave Bard)

kastle2-fx-wizard-1.1

Fixed:

- delay now works in full 1.15s range

kastle2-fx-wizard-1.0

release version

To check the firmware version:

- Boot into Test Mode: Hold the MODE button and turn the power ON.
- Listen to the Headphone Output / Audio Out directly: The unit will announce the firmware version via its voice output.
- Turn power OFF and ON to exit the test mode

HOW TO UPDATE KASTLE 2

- 1) Connect the Kastle 2 with a USB-C cable to your computer
- 2) Turn OFF the power switch (left)
- 3) Hold SHIFT and turn ON the power switch (right)
- 4) Kastle 2 will boot into Update Mode (no sound)
- 5) Copy the firmware **.uf2** file to the RPI-RP2 disk showing on your computer.

HOW TO UPDATE CITADEL

- 1) Disconnect the Citadel module from your Eurorack power!
- 2) Connect the Citadel with a USB-C cable to your computer while holding the SHIFT button.
- 3) The Citadel will boot into Update Mode (no sound)
- 4) Copy the firmware **.uf2** file to the RPI-RP2 disk showing on your computer.

Note: Depending on the **.uf2** firmware file size, the upload can usually take up to 2 minutes or more.