

# Kastle 2 FX Wizard

## Release Notes

### **kastle2-fx-wizard-1.6**

#### Changes:

- Fix USB descriptors (properly shows "Kastle 2 FX Wizard" on Windows, better overall Linux support)
- Add support for web app (FX Wizard Chamber)
- Small internal tweaks and cleanup

### **kastle2-fx-wizard-1.5**

#### Changes:

- Added Citadel compatibility

### **kastle2-fx-wizard-1.3**

#### Changes:

- Fixed unwanted triggering when Time potentiometer close to maximum

### **kastle2-fx-wizard-1.2**

#### Changes:

- Added USB MIDI (see manual)
- Better patch inputs responsivity and overall device performance
- Bug fixes (Replayer noise issue and small other issues)
- Tap tempo is multiplied by 4 (Unified with Wave Bard)
- Advanced settings takes shorter time to open (Unified with Wave Bard)

### **kastle2-fx-wizard-1.1**

#### Fixed:

- delay now works in full 1.15s range

### **kastle2-fx-wizard-1.0**

#### release version

To check the firmware version, listen to the audio output and boot Kastle 2 into the Test Mode: Hold FX MODE button and turn power ON.

A voice will announce the firmware version.

## HOW TO UPDATE:

- 1) Connect Kastle 2 with a USB-C cable to your computer
- 2) Turn OFF the power switch (left)
- 3) Hold SHIFT and turn ON the power switch (right)
- 4) Kastle 2 will boot to the update mode (no sound)
- 5) Copy the firmware **.uf2** file to the RPI-RP2 disk showing on your computer.