

Kastle 2 Wave Bard

Release Notes

kastle2-wave-bard-1.0

release version

To check the firmware version, listen to the audio output and boot Kastle 2 into the Test Mode: Hold BANK button and turn power ON.

A voice will announce the firmware version.

HOW TO UPDATE:

- 1) Connect Kastle 2 with a USB-C cable to your computer
- 2) Turn OFF the power switch (left)
- 3) Hold SHIFT and turn ON the power switch (right)
- 4) Kastle 2 will boot to the update mode (no sound)
- 5) Copy the firmware **.uf2** file to the RPI-RP2 disk showing on your computer.