

Kastle 2 Wave Bard

Release Notes

kastle2-wave-bard-1.5

Changes:

- Added Citadel compatibility
- Audio doesn't produce clicks when retriggering a sample
- Scale and Root settings are auto-saved
- Better mix of external & internal audio
(not halving when ext. signal connected)
- ENV output now correctly copies the volume envelope
- The lowest two MIDI octaves (notes 1-24) now play samples in their original pitch

kastle2-wave-bard-1.1

Changes:

- Added USB MIDI (see manual)
- Increase Pitch Mod range (up to 1V/Oct)
- Better patch inputs responsivity and overall device performance

kastle2-wave-bard-1.0

Release version

To check the firmware version, listen to the audio output and boot Kastle 2 into the Test Mode: Hold BANK button and turn power ON.

A voice will announce the firmware version.

HOW TO UPDATE:

- 1) Connect Kastle 2 with a USB-C cable to your computer
- 2) Turn OFF the power switch (left)
- 3) Hold SHIFT and turn ON the power switch (right)
- 4) Kastle 2 will boot to the update mode (no sound)
- 5) Copy the firmware **.uf2** file to the RPI-RP2 disk showing on your computer.

Note: Due to the large .uf2 firmware file size the upload usually takes up to 2 minutes or more.