



## INPUT CC NUMBERS FOR DIRECT PARAMETER SETTING

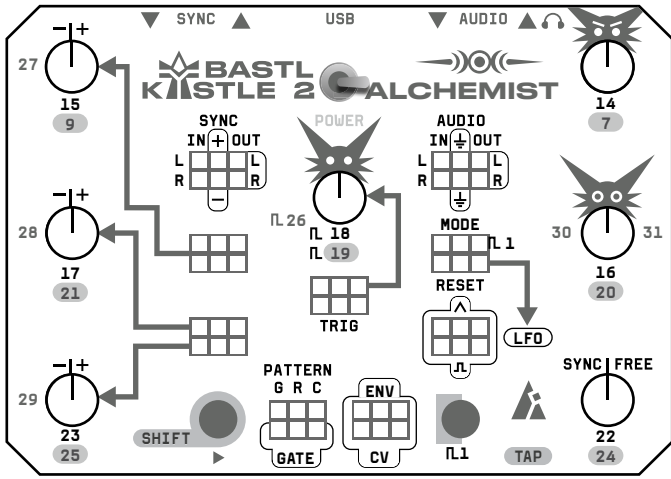


IL UPDATED ONLY RIGHT BEFORE SAMPLE IS TRIGGERED

## OUTPUT CC NUMBERS - DIRECT KNOB POSITION

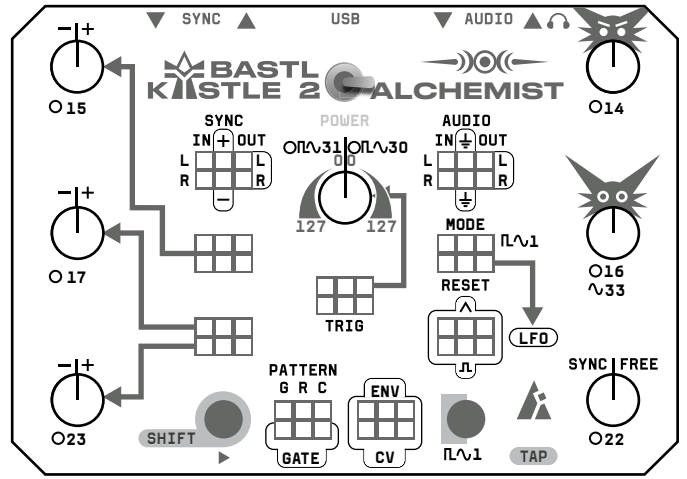


- O DIRECT KNOB POSITION
- IL UPDATED ONLY RIGHT BEFORE SAMPLE IS TRIGGERED
- ~ MODULATION APPLIED TO THE FINAL CC VALUE

## MIDI NOTE INPUT

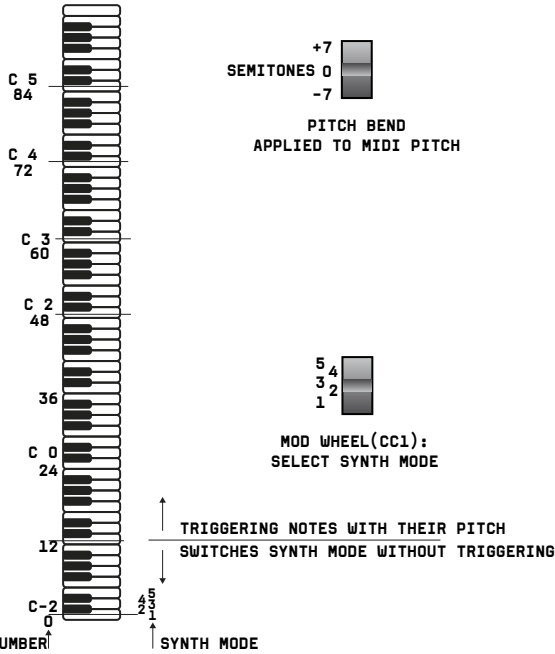


- CC33 TIMBRE + TIMBRE MODULATION SENT CONTINUALLY IF CHANGED. SENT ON MANUAL TRIGGER (SHORT SHIFT PRESS) MAP IT WITH MANUAL TRIGGER.
- CC1 SYNTH MODE: MAPPED TO 0-127. ALWAYS SENT RIGHT BEFORE NOTE ON/TRIGGER. NOT SENT ON MANUAL TRIGGER (SHORT SHIFT PRESS) MAP IT WITH TRIG INPUT

## MIDI NOTE OUTPUT

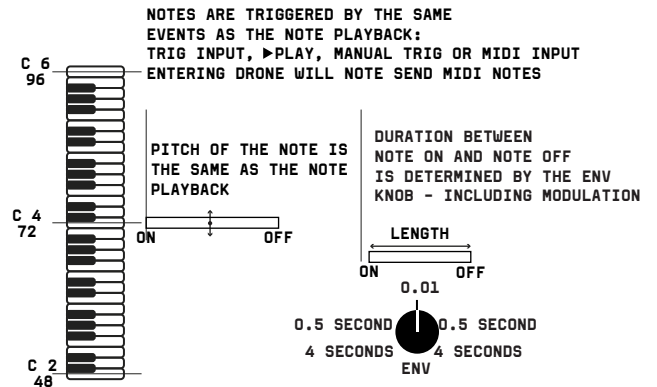

## ENTER/LEAVE ADVANCED SETTINGS

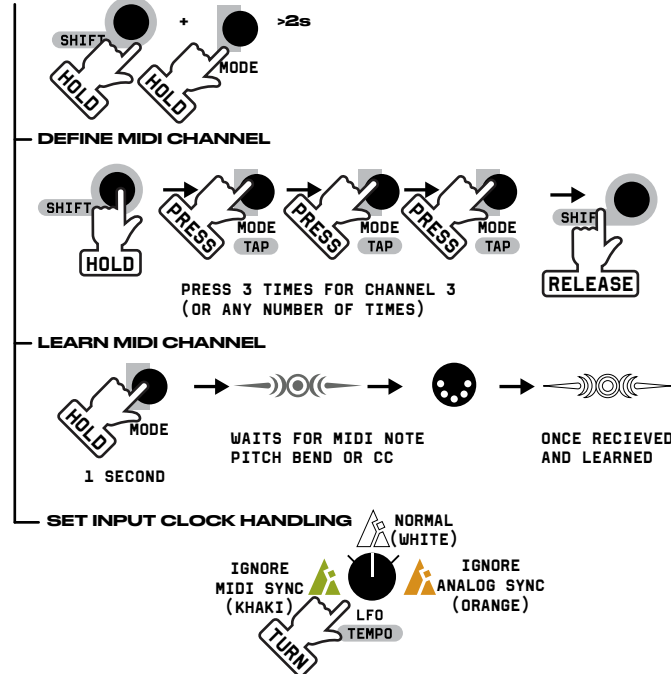

## SET MIDI CLOCK DIVIDER

