



## INPUT CC NUMBERS FOR DIRECT PARAMETER SETTING

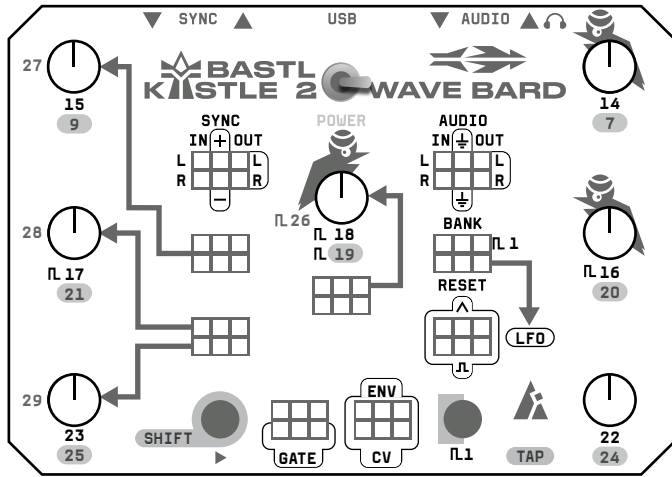

IL UPDATED ONLY RIGHT BEFORE SAMPLE IS TRIGGERED

## OUTPUT CC NUMBERS

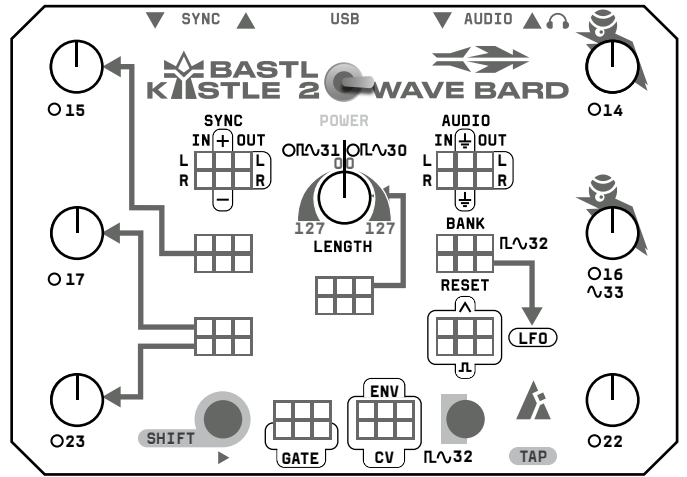


O DIRECT KNOB POSITION

IL UPDATED ONLY RIGHT BEFORE SAMPLE IS TRIGGERED

~ MODULATION APPLIED TO THE FINAL CC VALUE


## MIDI NOTE INPUT

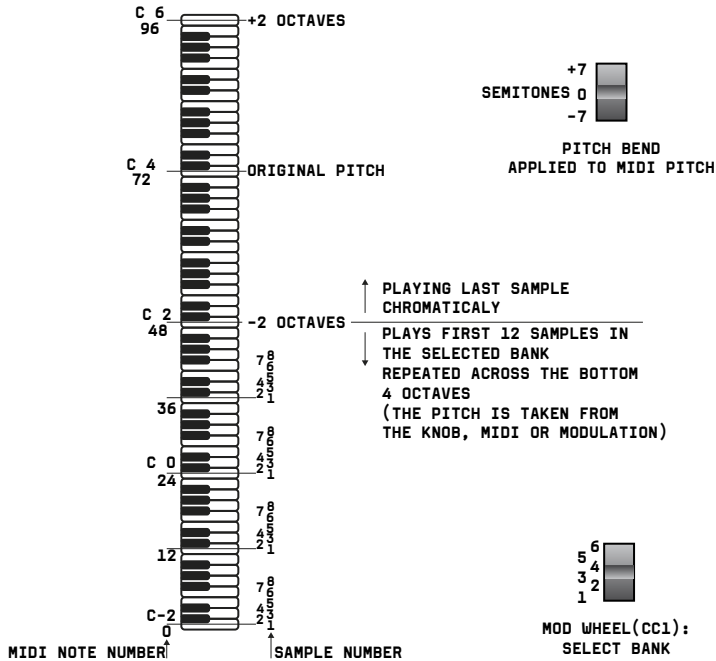


CC33 SAMPLE NUMBER MAPPED TO 0-127 SENT CONTINUALLY IF CHANGED. SENT ON MANUAL TRIGGER (SHORT SHIFT PRESS) MAP IT WITH MANUAL TRIGGER.

CC1 BANK AND SAMPLE COMBINED: MAPPED TO 0-127. ALWAYS SENT RIGHT BEFORE NOTE ON/TRIGGER. NOT SENT ON MANUAL TRIGGER (SHORT SHIFT PRESS) MAP IT WITH TRIG INPUT

## MIDI NOTE OUTPUT

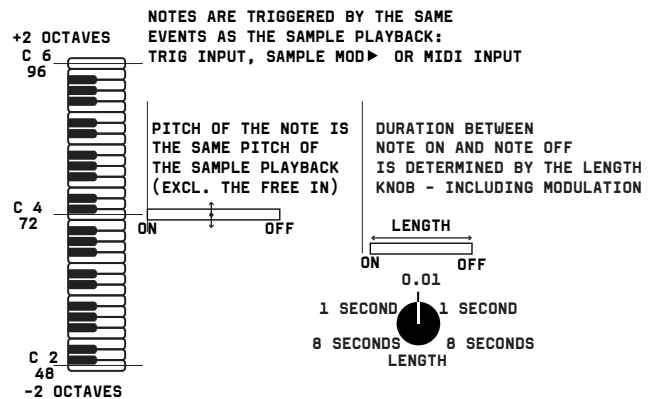

## ENTER/LEAVE ADVANCED SETTINGS

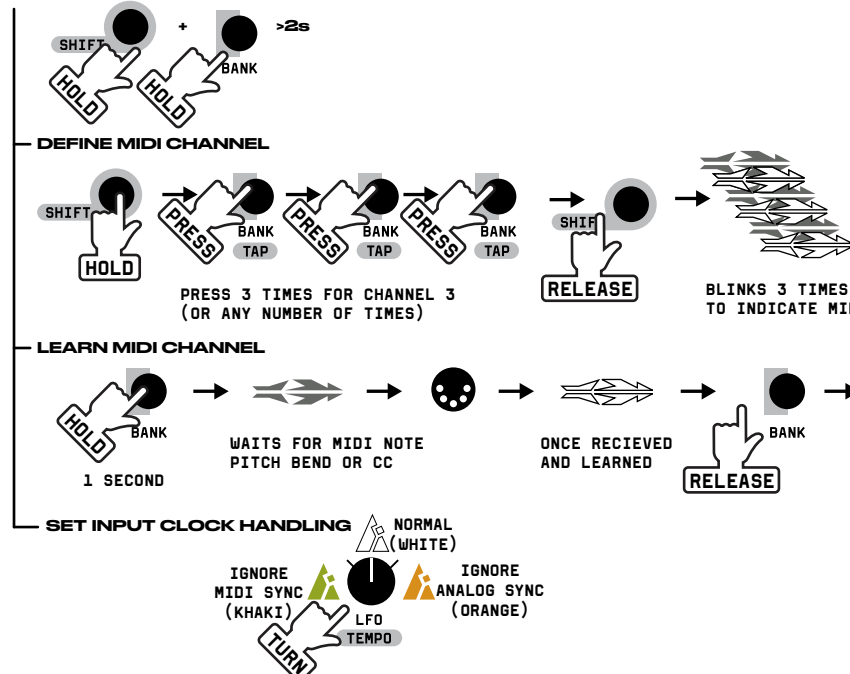

## SET MIDI CLOCK DIVIDER

