

Pizza FM & WAVE-SHAPING OSCILLATOR

Release Notes

pizza 1.02 (WAVE light at startup)

fix: better filtering on the v/oct input, less slew limiting

improvement: less noise on CTRL - VCA destination

pizza 1.01 (C/D light at startup)

fix: power down at initial sequence could cause corrupted memory

improvements: more robust(strengthened memory management and avoiding edge cases)

pizza 1.00 (G/H light at startup)

release version

HOW TO UPDATE:

1. Connect a micro USB cable to Pizza
2. Hold the PITCH button and plug the USB into your computer
3. Pizza shows up as an external disk on your computer
4. Copy the pizza*version*.uf2 file to this drive and wait for Pizza to update and boot to normal operation
5. Disconnect the USB and install Pizza in your rack

Pizza shows the firmware version by a static light of the LEDs at startup:

- The first beta firmware has the TUNE light ON.
- V1.0 has G/H light ON at startup.
- V1.01 has C/D light ON at startup.
- V1.02 has WAVE light ON at startup.