

PIZZA FIRMWARE UPDATE

1. Connect a micro USB cable to Pizza
2. Hold the PITCH button and plug the USB into your computer
3. Pizza shows up as an external disk on your computer
4. Copy the pizza*version*.uf2 file to this drive and wait for Pizza to update and boot to normal operation
5. Disconnect the USB and install Pizza in your rack

Pizza shows the firmware version by a static light of the LEDs at startup. The first beta firmware has the TUNE light ON.

V1.0 has G/H light ON.